SONY 3-856-647-21 (1)

FM/AM Radio Controlled Clock Radio ICF-C50
FM/MW/LW Radio Controlled Clock Radio ICF-C50L

Operating Instructions
Mode d'emploi
Gebruiksaanwijzing
Bedienungsanleitung
Istruzioni per l'uso

DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.
Dream Machine est une marque déposée de Sony Corporation.
Dream Machine ist ein Warenzeichen der Sony Corporation.
Dream Machine is aangedragenmerk handelsmerk van Sony Corporation.
Dream Machine è un marchio di fabbrica della Sony Corporation.

Sony Corporation © 1996 Printed in Malaysia

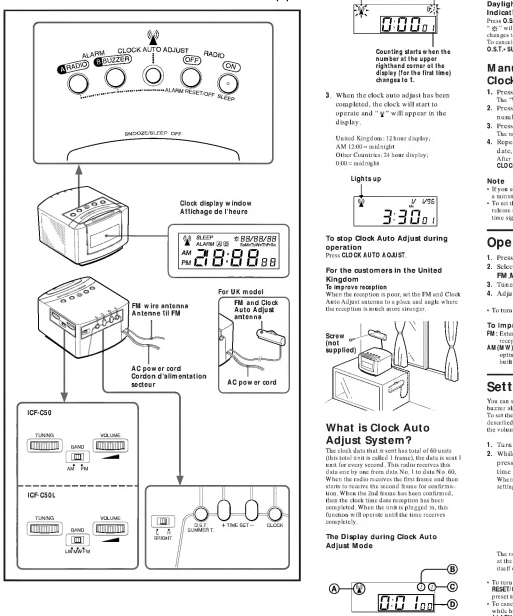

English

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

Before You Begin

Thank you for choosing the Sony Dream Machine! The Dream Machine will give you many hours of reliable service and listening pleasure.

Before operating the Dream Machine, please read these instructions thoroughly and retain them for future reference.

Features

- Radio Controlled Clock Auto Adjust System
- Dual alarm
- Sleep Function

Setting the Clock and Date

Setting the Clock Automatically

This radio has Radio Controlled Clock Auto Adjust System that adjusts to the correct time. The Radio Controlled Clock Auto Adjust System receives the clock data (Year, month, date, hour, minute, second and DST) on a certain radio wave and radio controls the clock time. Be sure to set the radio where reception would be easier.

1. Set the radio.
   Choose a place where there is good reception as possible.
2. Plug in the unit.
   The Clock Auto Adjust function will automatically operate and "⏳" will flash in the display.



3. When the clock auto adjust has been completed, the clock will start to operate and "⏳" will appear in the display.

   United Kingdom: 12-hour display; AM 12:00 = midnight
   Other Countries: 24-hour display; 0:00 = midnight

To stop Clock Auto Adjust during operation
Press **CLOCK AUTO ADJUST**.

For the customers in the United Kingdom
To improve reception
When the reception is poor, set the FM and Clock Auto Adjust antenna to a place and angle where the reception is much more stronger.

What is Clock Auto Adjust System?

The clock data that is sent has total of 60 units (this total unit is called 1 frame), the data is sent 1 unit for every second. This radio receives this data sent by one from data No. 1 to data No. 60. When the radio receives the first frame and then starts to receive the second frame for confirmation. When the 2nd frame has been confirmed, then the clock time data reception has been completed. When the unit is plugged in, this function will operate until the time receives completely.

The Display during Clock Auto Adjust Mode

Ⓐ	Reception indicator	Will flash during Clock Auto Adjust mode. Will appear when Clock Auto Adjust mode is completed.
Ⓑ	Reception indicator (frame data)	1: 1 frame data when received. 0: 1 frame data when not received.
Ⓒ	Reception indicator (unit data)	1: 1 unit data when received. 0: 1 unit data when not received.
Ⓓ	Duration of Clock Auto Adjust mode	Maximum 10 hours displayed, even though the Clock Auto Adjust mode is not completed after 10 hours, the operation is still continued.

When the LCD display is difficult to see.
Change the Bright switch to either H (High) or L (Low) for better display.

About Radio Reception
The radio controlled signal is transmitted from the areas shown below.

England: Teddington, Middlesex
52° 25' N, 01° 11' W
Germany: Mainflingen
50° 01' N, 09° 00' E

- The U.K. models will receive the radio signal from England. The current time of England will be displayed.
- The other models will receive the radio signal from Germany. The current time of Germany will be displayed.
- There may be areas where radio reception is weak.

Once the Clock Auto Adjust has been completed
If the reception has not changed, you do not have to set the clock again.
The Clock Auto Adjust function will automatically operate every night at AM 3:05 to keep the correct time. If the reception is incomplete after 12 minutes, the time setting will return to the original time and "⏳" will disappear from the display.

If you want to Restart the Clock Auto Adjust
Press **CLOCK AUTO ADJUST**.
While the Clock is operating, "⏳" will start to flash indicating that the Clock Auto Adjust function is operating. If the reception has been completed "⏳" will be displayed and the clock time will change to the correct time. If the reception is incomplete after 12 minutes, the time setting will return to the original time and "⏳" will disappear from the display.

About Daylight Saving Time (summer time) indication

The changing of the summer time will be automatically indicated by Clock Auto Adjust function. The change of summer time will have a hour lag.
Winter Time → Summer Time: about 1 hour and 10 minutes lag.
Summer Time → Winter Time: about 10 minutes time lag.
During the Summer Time mode, "⏳" will appear in the display.

To Change the Display to the Daylight Saving Time (summer time) Indication
Press **D.ST-SUMMER T.**
"⏳" will appear and the time indication changes to the summer time.
To cancel the summer time indication, press **D.ST-SUMMER T.** button again.

Manual Setting the Clock

1. Press **CLOCK** for more than 1 second. The "0:00" will start to flash in the display.
2. Press **TIME SET** + or − until the correct number appears in the display.
3. Press **CLOCK** once.
   The next category will flash in the display.
4. Repeat steps **2** and **3** to set the month, date, hour, minute.
   After setting the minute, press and release **CLOCK** to start the counting of the seconds.

Note
- If you stop during the clock setting, after about a minute the previous display will return.
- To set the current time exactly to the second, release the **CLOCK** with the radio or telephone time signal at step 4 (above).

Operating the Radio

1. Press **RADIO ON**.
2. Select **BAND** (**FM** or **AM** for ICF-C50, **FM**, **MW** or **LW** for ICF-C50L).
3. Tune in to a station using **TUNING**.
4. Adjust **VOLUME**.

- To turn off the radio, press **RADIO OFF**.

To Improve Radio Reception
FM: Extend the FM wire antenna to improve FM reception.
AM/MW/LW: Rotate the unit horizontally for optimum reception. A ferrite bar antenna is built-in the unit.

Setting the Alarm

You can set the radio alarm to **ALARM A**, and buzzer alarm to **ALARM B**.
To set the radio alarm, first tune in a station as described in "Operating the Radio" and adjust the volume.

1. Turn off the radio.
2. While holding down **ALARM A** or **B**, press **TIME SET** + or − until the desired time appears in the display.
   When you release **ALARM A** or **B**, the alarm setting is completed.

The radio or buzzer will automatically sound at the preset time, and automatically turn itself off after 60 minutes.

- To turn off the alarm manually, press **ALARM RESET/OFF**. The alarm will come on at the preset time on the next day.
- To cancel the alarm before the alarm time, while holding down **ALARM A** or **B**, press **ALARM RESET/OFF**.
- To check the preset time, press **ALARM A** or **B**.

Notes
- The buzzer sound level is fixed, and independent of the **VOLUME** control.
- If you set **ALARM A** and **ALARM B** to the same desired time, only **ALARM A** will work.
- Even if you are listening to the radio, you can set the radio or buzzer alarm.
- The alarm settings has a backup for about 10 minutes, when there is a service interruption for more than 10 minutes, the alarm setting memorys will be cancelled.

To Doze a Few More Minutes
1. Press **SNOOZE/SLEEP OFF**.
   The radio or buzzer will shut off but will automatically come on again after about 8 minutes. You can repeat this process as many times as you like.

- You can reset the alarm time while activating the snooze function.

To Use Both Sleep Timer and Alarm Function
You can fall asleep to the radio sound and you will be awakened by the radio or buzzer alarm at the preset time.

1. Set the alarm. (See "Setting the Alarm".)
2. Set the sleep timer. (See "Setting the Sleep Timer".)

Setting the Sleep Timer

By setting the sleep timer, you can fall asleep to the radio sound. The radio turns off after the selected time.

1. Press **SLEEP** repeatedly until the desired operating time is displayed.
   Each time you press **SLEEP**, the sleep timer indication changes as follows.

After setting the Sleep Timer, the current time will appear.

- To turn off the sleep timer before the selected time has elapsed, press **SNOOZE/SLEEP OFF**.

Precautions

On Installation
- Try near a window or place the radio where the reception is better.
- Do not place the unit where the reception would become weak (as follows).
  — near a TV, refrigerator, computer, etc.
  — on a steel table, steel shelf, and other steel objects.
- Operate the unit on the power sources specified in "Specifications".
- The warm air indicating operating voltage, etc. is located on the bottom exterior.
- To disconnect the power cord, pull it out by the plug, not the cord.
- Do not place the unit on soft materials (curtains, draperies) that block the ventilation holes.
- Should anything fall into the unit, unplug the unit and have it checked by qualified personnel before operating it further.
- The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself is turned off.

If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Specifications

Time display

United Kingdom	12-hour
Other Countries	24-hour

Frequency range:

Band	ICF-C50	ICF-C50L
FM	87.5 – 108.0 MHz	87.5 – 108.0 MHz
AM(MW)	530 – 1605 kHz	530 – 1605 kHz
LW	—	153 – 255 kHz

Speaker: Approx. 6.6 cm (2 5/8 inches) dia. 8 ohms
Power output:
100mW (at 10% harmonic distortion)
Power requirements
220 V – 230 V AC, 50 Hz
Dimensions: Approx. 125 x 91 x 140 mm (5 x 3 5/8 x 5 5/8 inches) (w/ h/ d) incl. projecting parts and controls
Mass: Approx. 675g (1 lb 8 oz)

Design and specifications subject to change without notice.

Troubleshooting

Should any problem occur with the unit, make the following simple checks to determine whether or not servicing is required.
If the problem persists, consult the nearest Sony dealer.

The clock auto adjust function does not operate and the clock display is stopped at 12:00.
Week reception, the unit cannot receive the correct time data.
Rotate the unit horizontally or place the radio where the reception is better.
The radio or buzzer alarm sound does not come on at the preset time.
Check the followings:
- **Is the current time correctly set?**
  Check the **AM**/**PM** indication.
  (UK model only.)
- **Is the alarm time correctly set?**
  Check the **AM**/**PM** indications.
  (UK model only.)
- **For radio alarm, is the desired station tuned in?**
- **For radio, is the VOLUME control adjusted correctly?**
  If it is turned down completely, the alarm sound will not be heard. Be sure to turn up the volume.
- **Only the alarm settings has been cancelled.**
  There was a service interruption for more than 10 minutes, the alarm settings and clock settings has been resumed. Then the Clock Auto Adjust function activated and the clock time has been set to the current time.

Français

AVERTISSEMENT

Afin d'éviter tout risque d'incendie ou de choc électrique, ne pas exposer cet appareil à la pluie ni à l'humidité.

Afin d'éviter tout choc électrique, ne pas ouvrir le coffret. Pour toute réparation, s'adresser à un professionnel uniquement.

Avant-propos

Merci d'avoir choisi ce radioréveil Sony Dream Machine! Il vous sera très utile et vous procurera de nombreuses heures d'écoute.
Avant la mise en service de ce radioréveil, veuillez lire attentivement ce mode d'emploi et le conserver pour toute référence ultérieure.

Caractéristiques

- Système de réglage automatique de l'horloge par la radio
- Double alarme
- Minuterie sommeil

Réglage de l'heure et de la date

Réglage automatique de l'horloge

Ce radioréveil comprend un système de réglage automatique de l'horloge par la radio. C'est-à-dire que ce système peut recevoir des données, telles que l'année, le mois, le jour, l'heure, les minutes, les secondes et l'heure d'été sur une onde radio précise et règle ensuite l'horloge en conséquence.
Veillez à poser le radioréveil dans un endroit de réception optimale.

1. Installez le radioréveil.
   Choisissez l'emplacement où la réception est la meilleure possible.
2. Branchez le radioréveil.
   Le système de réglage automatique de l'horloge fonctionne automatiquement et "⏳" clignote dans l'affichage.

3. Quand le réglage automatique de l'horloge est terminé, l'horloge se met en marche et "⏳" apparaît dans l'affichage.

   Royaume-Uni: affichage de 12 heures; AM 12:00 = minuit
   Autres pays: 24 heures; 0:00 = minuit



Pour arrêter le réglage automatique de l'horloge en cours
Appuyez sur **CLOCK AUTO ADJUST**.

Qu'est-ce que le réglage automatique de l'horloge?

Les données d'horloge transmises forment un total de 60 unités (un total correspond à 1 cadre) et une unité de données est transmise chaque seconde. Le radioréveil reçoit les données par unité, de l'unité No 1 à l'unité No. 60. Quand le radioréveil a reçu la première cadre, il continue ensuite cet reçu pour confirmation. Quand la deuxième cadre a été reçu, la réception des données horaires est terminée. Quand le radioréveil est branché cette fonction est activée jusqu'à ce que l'heure soit complètement reçue.

Affichage pendant le mode de réglage automatique de l'horloge

Ⓐ	Indicateur de réception	Il clignote pendant le réglage automatique de l'horloge. Il apparaît quand le réglage automatique de l'horloge est terminé.
Ⓑ	Indicateur de réception (données de cadre)	1: quand une donnée de cadre est reçue 0: quand aucune donnée de cadre n'est reçue
Ⓒ	Indicateur de réception (donnée d'unité)	1: quand une unité est reçue 0: quand aucune unité est reçue
Ⓓ	Durée du mode de réglage de l'horloge	Maximum: 10 heures, si l'horloge n'est toujours pas réglée au bout de 10 heures, ce mode reste actif.

Si l'affichage LCD est à peine visible
Réglez le curseur BRIGHT sur H (High) ou L (Low) pour mieux voir l'affichage.

A propos de la réception radio
Le signal radio est transmis à partir des zones suivantes:

Angleterre: Teddington, Middlesex
52° 25' N, 01° 11' W
Allemagne: Mainflingen
50° 01' N, 09° 00' E

- Les modèles pour le Royaume-Uni reçoivent le signal radio d'Angleterre. L'heure actuelle en Angleterre est alors affichée.
- Les autres modèles reçoivent le signal radio d'Allemagne. L'heure actuelle en Allemagne est alors affichée.
- Dans certaines régions, la réception radio peut être de mauvaise qualité.

Lorsque le réglage automatique de l'horloge est terminé
Si la réception n'a pas changé, vous n'avez pas besoin de changer de nouveau l'heure. Le réglage automatique de l'horloge fonctionne chaque nuit à 3:05 du matin pour que l'horloge soit toujours à l'heure. Si la réception est incomplète après 12 minutes, l'horloge revient au réglage original de l'heure et "⏳" disparaît de l'affichage.

Si vous voulez redémarrer le système de réglage automatique de l'horloge
Appuyez sur **CLOCK AUTO ADJUST**.
Quand l'horloge fonctionne, "⏳" se met à clignoter et indique que le réglage automatique de l'horloge est en service. Quand la réception des données est terminée, "⏳" reste allumé et l'horloge indique l'heure actuelle. Si la réception est incomplète après 12 minutes, l'horloge revient au réglage original de l'heure et "⏳" disparaît de l'affichage.

A propos de l'indication de l'heure d'été (D.S.T.)

Le passage à l'heure d'été est automatiquement effectué par le réglage automatique de l'horloge. L'heure d'été est décalée par rapport à l'heure normale.
Heure d'hiver → Heure d'été: décalage d'environ 1 heure et 10 minutes.
Heure d'été → Heure d'hiver: décalage d'environ 10 minutes.
Pendant l'heure d'été, "⏳" apparaît dans l'affichage.

Pour indiquer l'heure d'été (D.S.T.)
Appuyez sur **D.ST-SUMMER T.**
"⏳" apparaît et l'heure d'été est indiquée.
Pour annuler l'heure d'été, appuyez une nouvelle fois sur la touche **D.ST-SUMMER T.**

Réglage manuel de l'horloge

1. Appuyez sur **CLOCK** pendant plus d'une seconde.
   L'indication de l'année se met à clignoter dans l'affichage.
2. Appuyez sur **TIMER SET** + ou − jusqu'à ce que le nombre correct apparaisse dans l'affichage.
3. Appuyez une fois sur **CLOCK**.
   L'indication suivante clignote dans l'affichage.
4. Répétez les étapes **2** et **3** pour régler le mois, le date, l'heure et les minutes.
   Après avoir réglé les minutes, appuyez sur **CLOCK** et relâchez pour démarrer les secondes.

Remarque
- Si vous vous arrêtez pendant le réglage de l'horloge, l'affichage précédent réapparaît environ en 1 espace d'une minute.
- Pour régler l'heure à la seconde près, relâchez **CLOCK** quand le top horaire de radio ou du téléphone retentit à l'étape 4 ci-dessus.

Fonctionnement de la radio

1. Appuyez sur **RADIO ON**.
2. Sélectionnez la gamme **FM** ou **AM** sur le ICF-C50 et **FM**, **PO** ou **GO** sur le ICF-C50L.
3. Accordez une station avec **TUNING**.
4. Ajustez **VOLUME**.

- Pour éteindre la radio, appuyez sur **RADIO OFF**.

Pour améliorer la réception radio
FM : Déployez l'antenne filFM pour améliorer la réception FM.
AM (PO)/ GO : Faites pivoter le radioréveil à l'horizontale pour une réception optimale. Une barre de ferrite est intégrée au radioréveil.

Réglage de l'alarme

Vous pouvez sélectionner l'alarme radio, **ALARM A**, ou le sonnerie, **ALARM B**.
Pour régler l'alarme radio, accordez d'abord une station comme décrit dans "Fonctionnement de la radio" et réglez le volume.

1. Eteignez le radioréveil.
2. Tout en tenant **ALARM A** ou **B** enfoncée, appuyez sur **TIMER SET** + ou – jusqu'à ce que l'heure souhaitée apparaisse dans l'affichage.
   Quand vous relâchez **ALARM A** ou **B**, le réglage de l'alarme est terminé.

La radio ou la sonnerie se déclenchera automatiquement à l'heure prévue le lendemain et s'arrêtera 60 minutes plus tard.

- Pour éteindre l'alarme manuellement, appuyez sur **ALARM RESET/OFF**. L'alarme se déclenchera de nouveau le jour suivant à l'heure prévue.
- Pour annuler l'alarme avant qu'elle ne se déclenche
  Tout en tenant **ALARM A** ou **B** enfoncée, appuyez sur **ALARM RESET/OFF**.
- Pour contrôler l'heure préréglée, appuyez sur **ALARM A** ou **B**.

Remarques
- Le niveau de la sonnerie est fixe et indépendant du réglage de **VOLUME**.
- Si vous réglez **ALARM A** et **ALARM B** sur la même heure, seule l'alarme A fonctionne.
- Vous pouvez mettre l'alarme radio en service ou la sonnerie même pendant que vous écoutez la radio.
- Les réglages de l'alarme sont sauvegardés pendant 10 minutes, et en-delà les second annulés.

Pour sommeiller quelques minutes de plus
1. Appuyez sur **SNOOZE/SLEEP OFF**.
   La radio ou la sonnerie s'arrête mais elle se remettra en marche au bout de 8 minutes environ. Vous pouvez répéter cette opération à volonté.

- Vous pouvez changer l'heure de l'alarme après avoir activé la fonction snooze.

Pour utiliser la minuterie sommeil et l'alarme
Vous pouvez vous endormir au son de la radio et être réveillé par la radio ou la sonnerie à l'heure préréglée.

1. Réglez l'alarme. (voir "Réglage de l'alarme".)
2. Réglez la minuterie sommeil. (voir "Réglage de la minuterie sommeil".)

Réglage de la minuterie sommeil

Si vous réglez cette minuterie, vous pourrez vous endormir au son de la radio. La radio s'éteint au bout du temps sélectionné.

1. Appuyez de façon répétée sur **SLEEP** jusqu'à ce que le temps de fonctionnement souhaité soit affiché.
   A chaque pression sur **SLEEP**, l'indication de la minuterie change comme suit.

Après le réglage de la minuterie, l'heure actuelle apparaît.

- Pour éteindre la minuterie avant que le temps sélectionné ne soit écoulé, appuyez sur **SNOOZE/SLEEP OFF**.

Précautions

Installation
- Pour le radioréveil près d'une fenêtre ou dans un endroit où la réception est bonne.
- N'installez pas le radioréveil dans les endroits où la réception est de mauvaise qualité, comme par exemple:
  — près d'un téléviseur, réfrigérateur, ordinateur, etc.
  — sur une table en une étagère métallique, ou tout autre objet métallique.
- Faites fonctionner le radioréveil sur les sources d'alimentation mentionnées dans les "Spécifications".
- La plaque signalétique indiquant la tension de fonctionnement et autres informations électriques se trouve sous le radioréveil.
- Débranchez le cordon d'alimentation en tirant sur la fiche. Ne tirez jamais sur le cordon proprement dit.
- Ne pas poser le radioréveil sur une surface souillure (comme un tapis), sous tissu, etc.) ou près de trous (comme un rideau ou une tenture) risquant de bloquer les orifices de ventilation.
- Si un solide ou liquide tombait dans le radioréveil, débranchez-le et faites-le vérifier par un technicien qualifié avant de le remettre en service.
- Le radioréveil n'est pas déconnecté de la source d'alimentation secteur tant qu'il est branché sur la prise murale, même s'il a été mis hors tension.

Pour toute question ou problème au sujet de cette radio, veuillez consulter votre revendeur Sony.

Spécifications

Affichage de l'heure

Royaume-Uni	12 heures
Autres pays	24 heures

Plage de fréquences:

Gamme	ICF-C50	ICF-C50L
FM	87,5 - 108 MHz	87,5 - 108 MHz
AM (PO)	530 - 1605 kHz	530 - 1605 kHz
GO	—	153 - 255 kHz

Haut-parleur: Env. 6,6 cm (2 5/8 pouces) dia., 8 ohms
Puissance de sortie: 100 mW (à 10% de distorsion harmonique)
Alimentation: Secteur 220-230 V, 50 Hz
Dimensions: Env. 125 x 91 x 140 mm (l/ h/ p) (5 x 3 5/8 x 5 5/8 pouces) saillies et commandes comprises
Poids: Env. 675 g (1 lb 8 on.)

La conception et les spécifications sont modifiables sans préavis.

Guide de dépannage

En cas de problème, vérifiez rapidement les points suivants pour savoir si une réparation est nécessaire ou non.
Si le problème persiste, consultez le revendeur Sony le plus proche.

Le réglage automatique de l'horloge ne fonctionne pas et l'indication de l'heure s'arrête sur 12:00.
La réception est trop faible et le radioréveil ne peut pas recevoir les données horaires exactes. Faites pivoter le radioréveil à l'horizontale ou installez-le dans un endroit où la réception est meilleure.
La radio ou la sonnerie ne se déclenche pas à l'heure préréglée.
Vérifiez les points suivants:
- **Est-ce que l'heure est réglée correctement?**
  Vérifiez l'indication **AM**/**PM**.
  (Modèle pour le Royaume-Uni seulement)
- **Est-ce que l'heure de l'alarme est réglée correctement ?**
  Vérifiez l'indication **AM**/**PM**.
  (Modèle pour le Royaume-Uni seulement)
- **Est-ce que la station souhaitée pour l'alarme radio est accordée?**
- **Est-ce que la commande VOLUME est réglée correctement pour la radio?**
  Si le volume est complètement réduit, l'alarme ne sera pas audible. Augmentez le dans ce cas.
- **Seules les réglages de l'alarme ont été annulés.**
  Il y a eu une panne de plus de 10 minutes, et les réglages de l'alarme et de l'heure ont été réinitialisés.
  Le réglage automatique de l'heure a été ensuite activé et l'horloge a été remise à l'heure.

Copyright © 2004. Acer Incorporated.
All Rights Reserved.

TravelMate 3200 Series User's Guide
Original Issue: July 2004

Changes may be made periodically to the information in this publication without obligation to notify any person of such revision or changes. Such changes will be incorporated in new editions of this manual or supplementary documents and publications. This company makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims the implied warranties of merchantability or fitness for a particular purpose.

Record the model number, serial number, purchase date, and place of purchase information in the space provided below. The serial number and model number are recorded on the label affixed to your computer. All correspondence concerning your unit should include the serial number, model number, and purchase information.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopy, recording, or otherwise, without the prior written permission of Acer Incorporated.

TravelMate 3200 Series Notebook Computer

Model Number : _____

Serial Number: _____

Purchase Date: _____

Place of Purchase: _____

Acer and the Acer logo are registered trademarks of Acer Incorporated. Other company's product names or trademarks are used herein for identification purposes only and belong to their respective companies.

Downloaded from www.Manualslib.com manuals search engine

Contrast

The level of contrast can be adjusted on the Integrated Display by using the **UP** and **DOWN** arrows. Press the **UP** arrow to increase the contrast, and press the **DOWN** arrow to decrease the contrast.

Navigating the Menus

The Compaq Integrated Management Display is menu-driven and easy to use. Information to navigate and utilize the menus follows.

Normal Run-time Behavior

When powering up the server, the first IMD screen shows the model number and LCD firmware revision of the server's display.

Next, a series of server Power-On Self-Test (POST) operations is displayed. During POST, the display indicates the server test in progress by a spinning bar beside the menu item. When the test is finished, the IMD shows a check mark by the completed menu item. A check mark means that the test is complete, but does not necessarily mean the test was free from errors.

If an error occurs during POST, the server logs the error to the IMD under Unviewed Events and requires the user to view the error before proceeding to any other menu choices.

If there are no errors, the Idle Screen Text appears. Figure 6-3 shows the default screen but this screen could be different if the text changed during configuration.

Navigation Buttons

To navigate through the menus, use the four buttons shown in Figure 6-4. The UP and DOWN arrow keys (❷and ❸) allow the user to move through the menu screens and choose menu items. The right button (❹) acts as an Enter key and allows the server to travel down through the menus. The left button (❶) acts as an Escape key and allows travel back up the menu.

Writer: Salvo Project: Compaq ProLiant 5500 Servers Setup and Installation Guide Comments: 328470-001\July 1998
Downloaded from www.Manualslib.com manuals search engine File Name: G-CH06.DOC Last Saved On: 7/6/98 4:16 PM

CHASSIS / FRAME

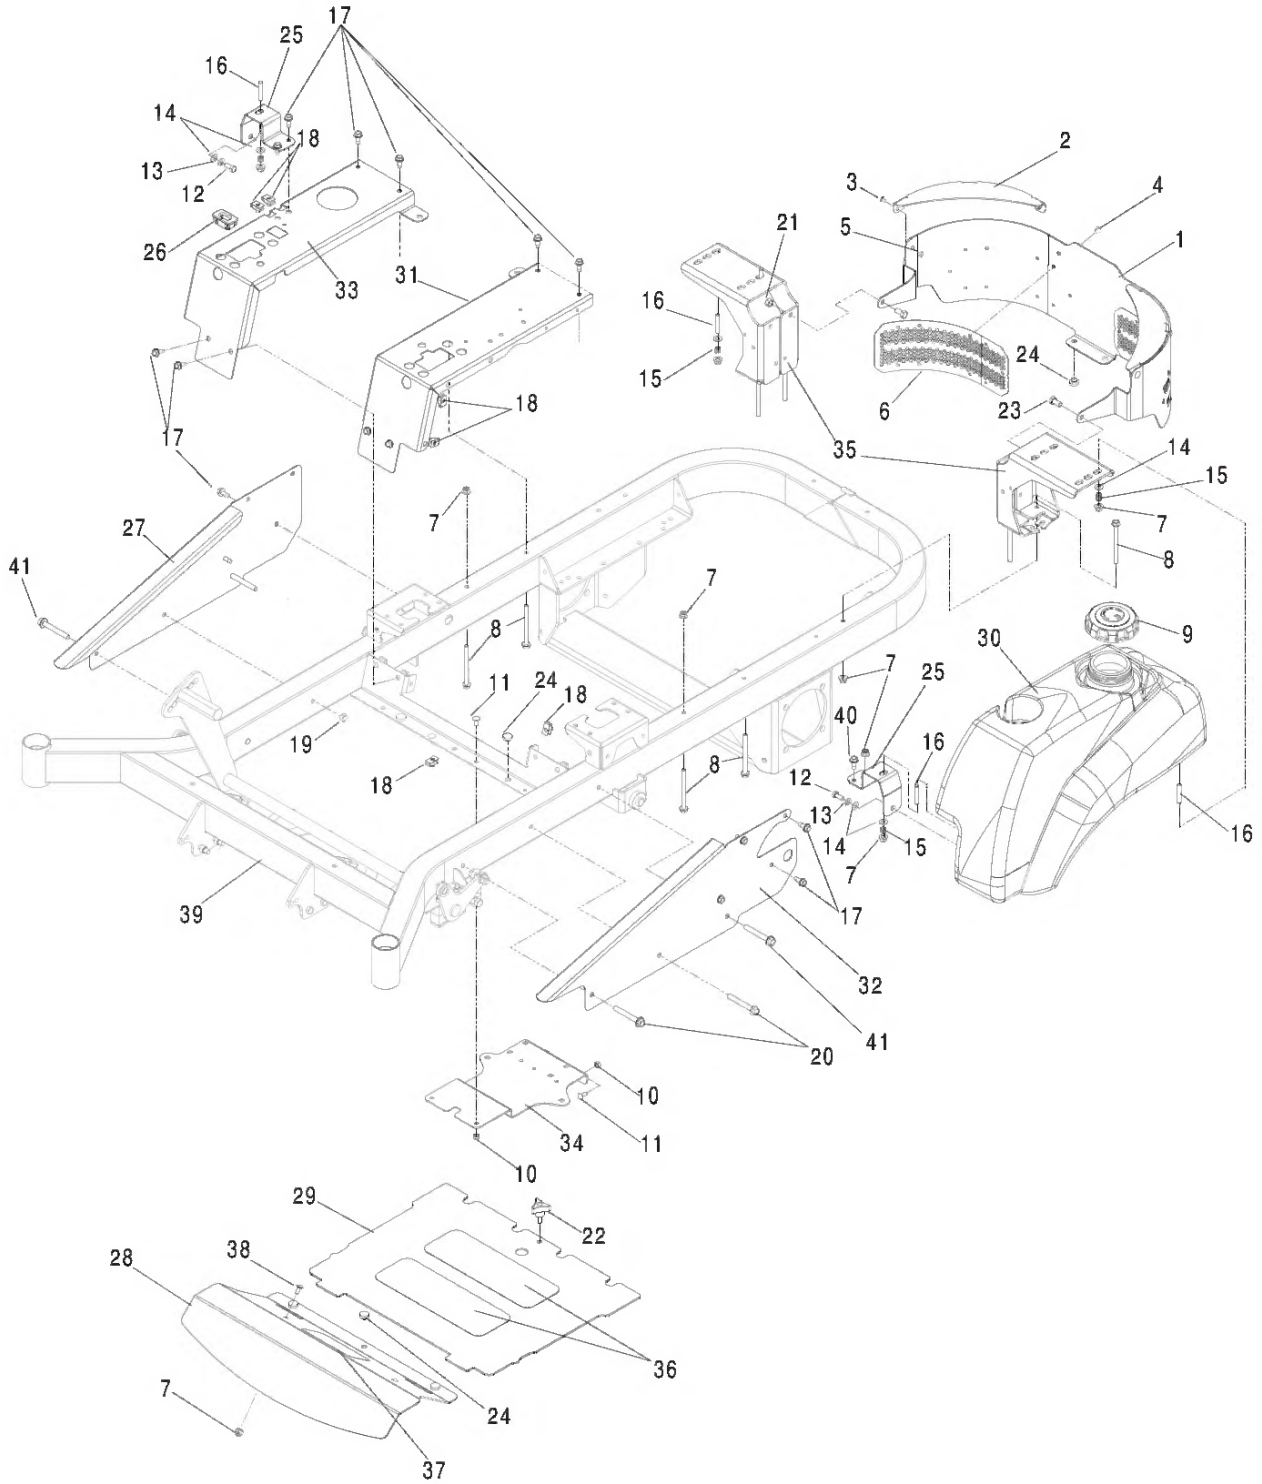

Downloaded from www.Manualslib.com manuals search engine

What's in the box

FR Contenu de la boîte

ES Qué hay en la caja

- Television
- Téléviseur
- Televisor

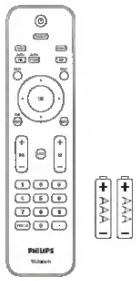

- Remote control and 2 x AAA batteries
- Télécommande et 2 piles AAA
- Control remoto y 2 baterías AAA

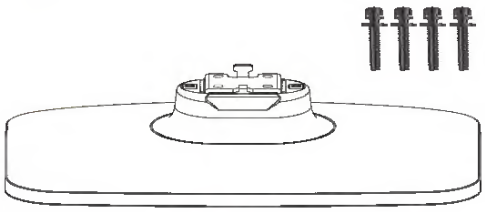

- TV stand and 4 x bolts
- Pied de téléviseur et 4 boulons
- Base de TV y 4 pernos

- Stand may differ according to TV model.
- Pied peut varier selon le modèle de téléviseur.
- La base puede ser distinta según el modelo de la TV.

- Quick Start Guide
- Guide de démarrage rapide
- Guía de inicio rápido

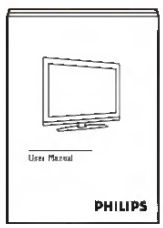

- User Manual
- Manuel d'utilisation
- Manual del usuario

Downloaded from www.Manualslib.com manuals search engine

Make certain that all input cables are kept away from speaker cables, power cables and power transformers.

Speaker cables must also be kept away from power cables.

Grounding the Unit:

The chassis of the unit must be grounded by using the GROUND terminal located on the back.

The amplifier must be connected to an earth ground such as a cold water pipe or a substitution of the ground. If additional equipment is installed along with the amplifier, make sure that the additional chassis are also grounded.

DC Power Connection (only BX-300):

The unit may also be powered by an external 12 volt battery or other direct current source with negative (–) as ground.

Power connection is made at the DC terminal strip on the back panel.

Ventilation:

In order to offset the heat generated by the unit, it is necessary to provide ample ventilation around the unit.

Avoid blocking or impeding the ventilation holes and slits on the unit.

Locate the unit where it is free from direct sunlight, humidity, dust circulation or vibrations to prevent any unnecessary problems.

INPUT CONNECTIONS

Microphones:

Three microphone inputs on the BX-300 and four microphone inputs on the BX-600 and BX-1200 are provided.

They may be used with balanced or unbalanced high impedance (20K ohm) or low impedance (200 ohm) microphones. An unbalanced microphone with 30' to 60' (10 to 20m) of cable may be used, but results will depend on the microphone and its characteristics.

MIC-1, MIC-2, MIC-3 and MIC-4:

The MIC-1 input is unbalanced high impedance and is provided with a ¼'' phone jack located on the front panel.

MIC-2, -3, -4 inputs are balanced low impedance and all are located on the back panel.

Unbalanced High Impedance Microphone:

Use with single conductor shielded cable.

Unbalanced microphone Single pole phone plug

Downloaded from www.Manualslib.com manuals search engine

3 Front AV (Audio/Video) Input Connections

Audio and Video Front Inputs are available for a quick connection of a VCR, to playback video from a camera, or attach a gaming device. Use the AV button on the remote control to tune these inputs.

1. **Connect the video (yellow) cable** from the Video output on the Camera (or accessory device) to the Video (yellow) Input located on the FRONT of the TV.
2. **For Mono Devices:** Connect one end of the audio cable from the Audio Out jack on the device to the Audio In (white) jack on the FRONT of the television.
3. Turn the TV and the accessory device ON.
4. **Press the CH+ or CH- button** on the remote control to tune the TV to the front input jacks. "Front" will appear on the TV screen.
5. **Press the PLAY ▶ button** on the accessory device to view playback, or to access the accessory device (camera, gaming unit, etc.).

NOTE: For model 13MT1533 Audio sound is only available via the headphone connection.

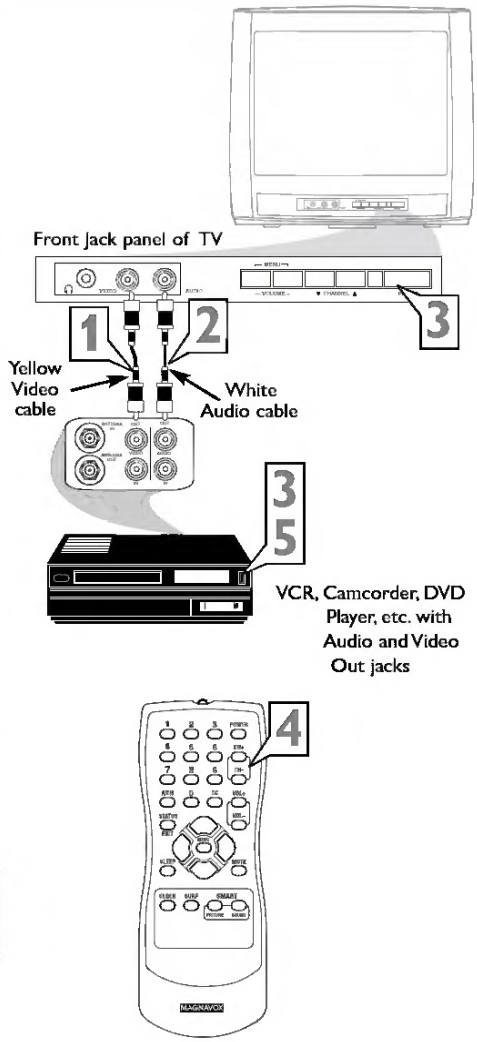

Downloaded from www.Manualslib.com manuals search engine

3 WIRING
CABLAGE
VERDRAHTUNG
CABLEADO
AANSLUITING

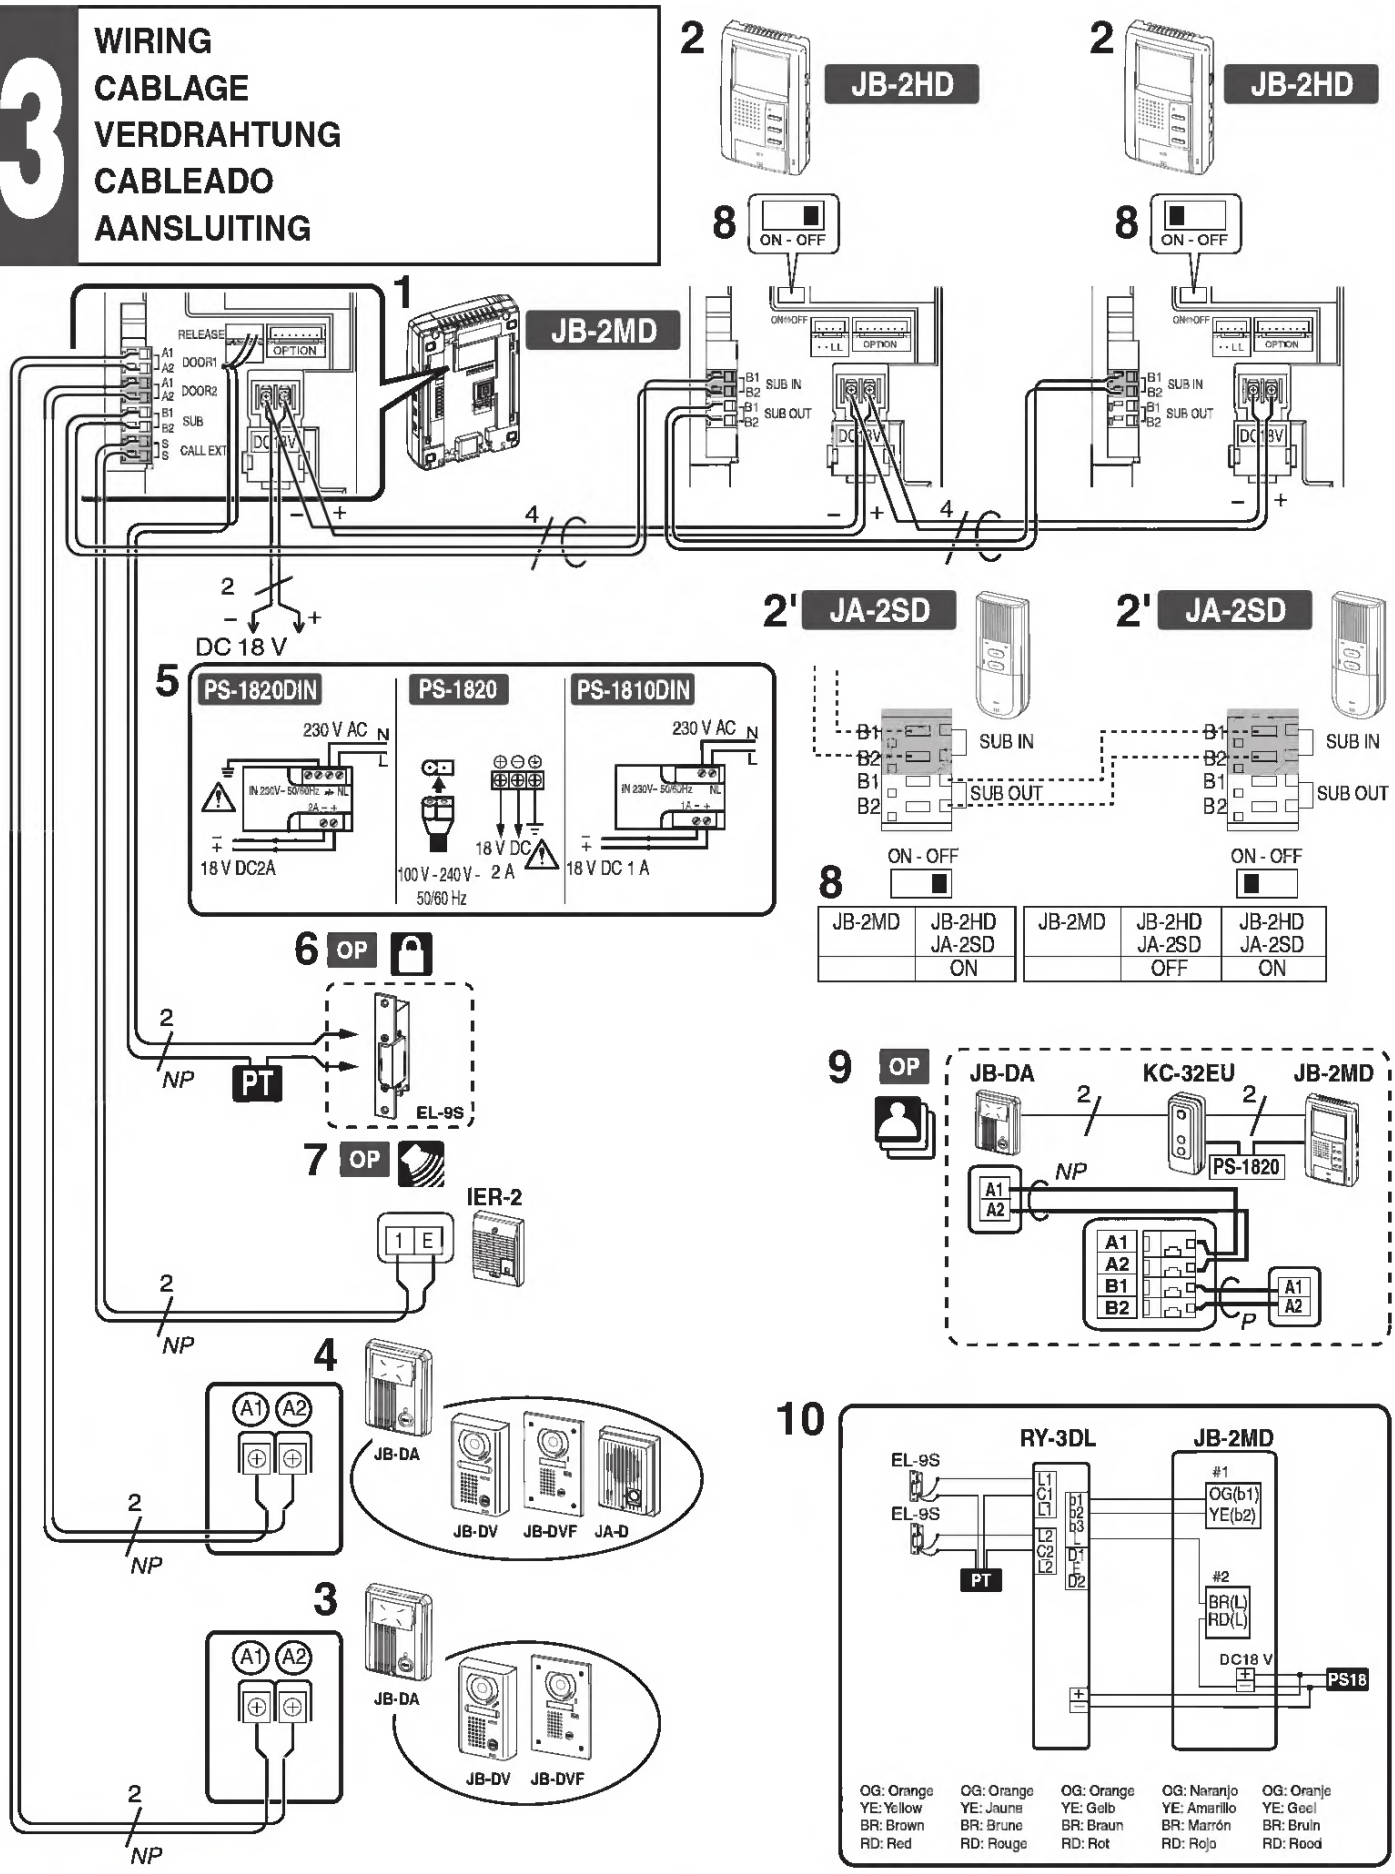

Downloaded from www.Manualslib.com manuals search engine

Chapter 4

Cluster Planning

Before connecting any cables or powering on any hardware on your Compaq Parallel Database Cluster Model PDC/O2000 (referred to here as the PDC/O2000), it is important that you understand how all the various cluster components fit together to meet your operational requirements. The major topics discussed in this chapter are:

- Site planning
- Capacity planning for cluster hardware
- Planning cluster configurations for redundant Fibre Channel Fabrics
- Planning cluster configurations for redundant Fibre Channel Arbitrated Loops
- RAID planning
- Planning the grouping of physical disk storage space
- Disk drive planning
- Network planning

Downloaded from www.Manualslib.com manuals search engine

Colour Television

14PT1324

Product highlights

- *Contrast Plus*
- *Personal Preference Key*
- *Sleeptimer*
- *Plug and Play Installation*

CONTRAST+

SLEEPTIMER

Plug & Play

Remote control unit varies with model

Miglioriamo il tuo mondo.

PHILIPS

Downloaded from www.Manualslib.com manuals search engine

Display

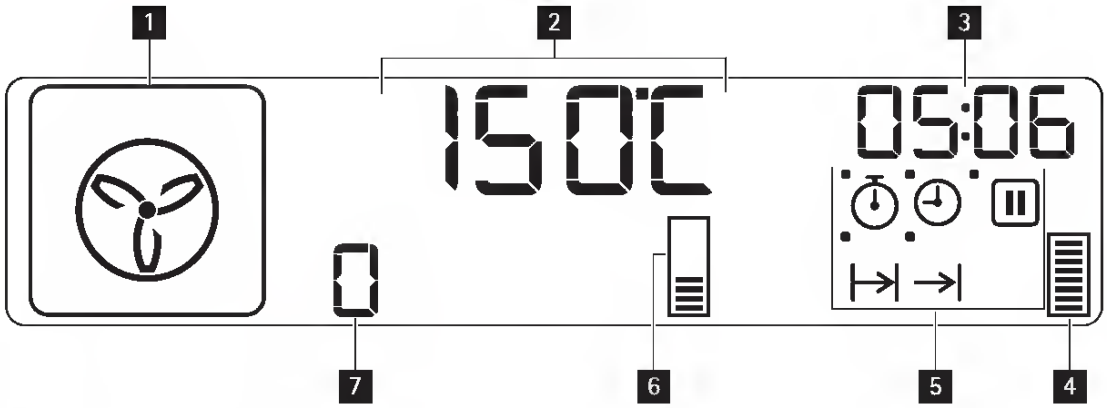

1 Oven function symbol
2 Temperature/Time display
3 Clock/Residual heat display (also Minute minder and Time of day)
4 Residual heat indicator
5 Indicators for the clock functions (refer to the table "Clock functions")
6 Heat up indicator
7 Number of oven function/programme

Other indicators of display

Symbols	Name	Description
	Function	You can choose an oven function
	Automatic programme	You can choose an oven programme
	My favourite programme	The favourite programme operates
kgr / gr	kgr/gr	An oven programme with weight input operates
h / min	h/min	A clock function operates
°C ⇢	Temperature / fast heat up	The function operates
°C	Temperature	You can examine or change the temperature
	Core temperature sensor	The core temperature sensor is in the core temperature sensor socket
	Door lock	The door lock function operates
	Oven light	The oven light is off
	Minute minder	The minute minder function operates

Heat up indicator

If you set an oven function, the bars in the display come on one by one. The bars show that the temperature in the appliance increases or decreases.
When the appliance is at the set temperature, an acoustic signal sounds and the Heat up indicator goes off the display.

Downloaded from www.Manualslib.com manuals search engine

1.3.9 Connecting USB Devices (Optional)

The USB ports on the rear panel enable the system to support additional serial devices without using up your system resources.
To connect a USB device, simply plug the device cable into a USB port marked on the rear panel. See the following figure:

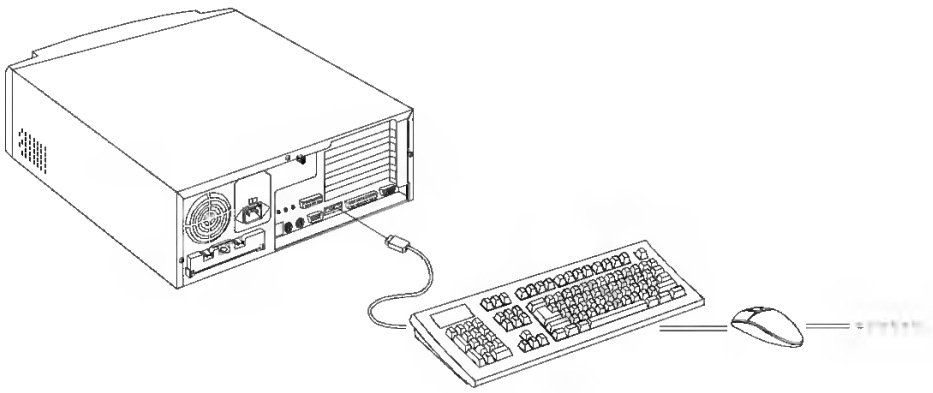

Figure 1-11 Connecting USB Devices

Most USB devices have a built-in USB port which allows you to daisy-chain other devices.

3. Вставте болти, у плату/кронштейн та фіксатори і, за допомогою гайкового ключа надійно прикрутіть болти до монтажних гайок.

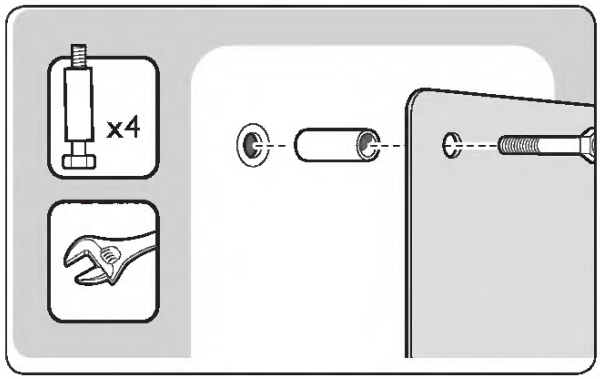

4. Дотримуйтесь інструкцій, які додаються до VESA-сумісного настінного кронштейна.

3.3 Під'єднання кабелю антени

1. Знайдіть роз'єм **TV ANTENNA**, який розташований з тильної сторони телевізора.
2. Під'єднайте один кінець кабелю антени (не додається) до роз'єму **TV ANTENNA**. Якщо кабель антени не підходить, використайте адаптер.

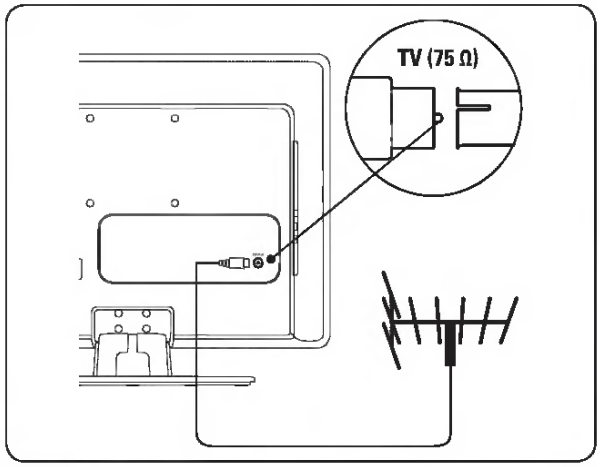

3. Під'єднайте інший кінець кабелю антени до виходу антени; перевірте, чи кабель надійно під'єднаний з обох кінців.

3.4 Під'єднання кабелю живлення

⚠ ПОПЕРЕДЖЕННЯ. Перевірте, чи напруга в мережі відповідає напрузі, вказаній на задній панелі телевізора. Не під'єднуйте кабель живлення, якщо значення напруги різняться.

Щоб під'єднати кабель живлення

Примітка. Розташування роз'єму живлення відрізняється, залежно від моделі телевізора.

1. Знайдіть роз'єм **AC IN**, який знаходиться на задній панелі або внизу телевізора.

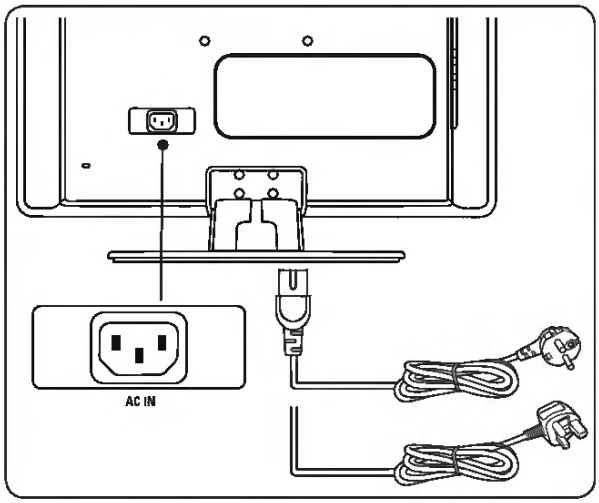

2. Під'єднайте кабель живлення до роз'єму живлення **AC IN**.
3. Під'єднайте кабель живлення до мережі живлення і перевірте, чи кабель надійно під'єднаний з обох кінців.

Downloaded from www.Manualslib.com manuals search engine

To view current alarms, perform the following steps:

1 Using the operating panel's numeric keypad, enter a valid ID code to display the Action Menu 1 (see page 19) if no burglary groups are on; or press the "Turn off" selector button (if burglary groups are on) to deactivate all annunciating devices.

2 If any burglary groups are on, complete the steps under "Turning Off Burglary Protection" in the *SYSTEM OPERATION* section. When all burglary groups are off, press **Continue** to display Action Menu 1.

3 Press **See alarms** to display the alarm type, point number, and description.

4 Press **Prev** or **Next** to display additional alarms.

5 Press **Quit** to display Action Menu 1.

Entering Your Personal ID Number

The first step in performing any function within the FOCUS® 200 PLUS system is to enter your personal six-digit ID number.

To enter a valid ID code, perform the following steps:

1 Enter your six-digit personal ID number. You should hear a short beep after each digit is entered. After your number has been accepted, you will hear a longer beep.

2 Now wait about 15 seconds and try to enter another, random six-digit number. What happens now?

The number is recognized as an invalid ID code and the operating panel will display "Code Incorrect, Try Again."

3 If you make a mistake, press "Clear" to re-enter the number.

The operating panel is active for 10 seconds after a valid code is entered. You must enter a menu selection within that time or the operating panel will deactivate, requiring the input of a valid ID code again. Once you have selected a menu item, however, the panel remains active for a full minute before becoming inactive. This timeout feature automatically secures your FOCUS® 200 PLUS security system in the event of a distraction or emergency that causes you to step away from the operating panel.

Downloaded from www.Manualslib.com manuals search engine

Main Board Diagram

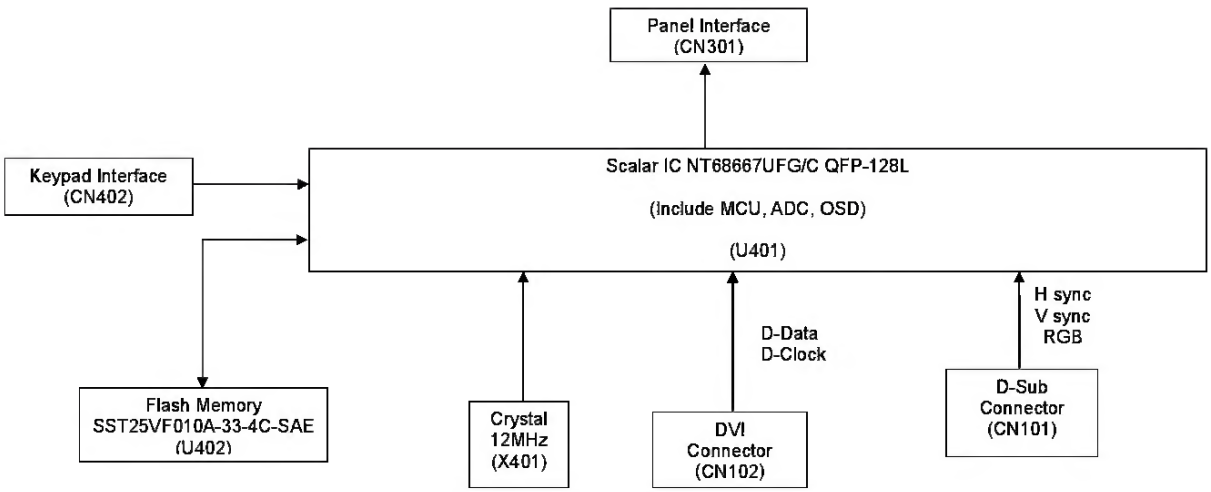

Downloaded from www.Manualslib.com manuals search engine

1.3.7 System Security

The *AlphaServer IP Platform* contains front and rear key locking doors to limit access to system components. Each *AlphaServer IP Platform* comes with a duplicate set of front and rear door keys.

In addition, each *AlphaServer* 1000A system contains a key to lock the individual processor.

Refer to the *AlphaServer 1000A Rackmount Owner's Guide* for instructions on locking the *AlphaServer* 1000A system.

Note

Record the key number for each cabinet door and each CPU. Store this information in a safe place; you will need the information if replacement is necessary.

1.4 Required and Optional Hardware

This section provides a brief description of each major component of the *AlphaServer IP Platform*, and lists the required and optional hardware. Contact your Compaq sales representative for the current supported options and ordering information.

1.4.1 AlphaServer 1000A System

This section describes the *AlphaServer* 1000A system. It also lists the required hardware for this system.

1.4.1.1 Overview

The *AlphaServer* 1000A system is an Alpha uniprocessor server running the *Tru64 UNIX* operating system. A single IP cabinet can support up to two *AlphaServer* 1000A systems. The *AlphaServer* 1000A system drives all functions within the IP Platform, including voice processing, management, and communications. In addition, application, service, and other layered software run on an *AlphaServer* 1000A system. The *AlphaServer* 1000A offers high reliability features such as ECC memory and ECC cache.

The *AlphaServer* 1000A system includes:

- 9 expansion slots: 7 PCI slots and 2 EISA slots
- 256 MB memory, expandable to 1 GB memory
- Integrated Fast-Wide Single-Ended SCSI-2 controller (supports wide and narrow drives)
- Multiple drive bays supporting a 1.44 MB floppy diskette, RRD4 x-xx CD-ROM, 1 available removable media drive bay, and 3 3.5-inch hard disks
- 2 serial ports (9-pin) and one enhanced bi-directional parallel port (25-pin)

For additional information on the *AlphaServer* 1000A system features and capabilities, see the *AlphaServer 1000A Rackmount Owner's Guide*.

Downloaded from www.Manualslib.com manuals search engine